 


Silhouette Studio – Page Setup

Step 1: Open Silhouette Studio

- Double-click on the Silhouette Studio icon to open the program.
- The “Page Setup” panel automatically opens along the right-hand side of the screen.

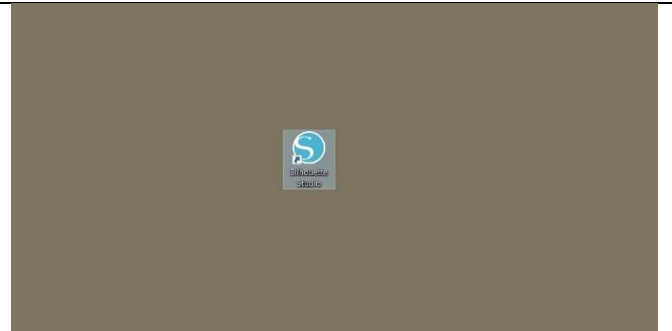


Step 2: Changing page size

- Use the “Width” and “Height” to change the page size to match your material.
- 12” is the maximum width the Silhouette can cut. For material without a backing, such as paper or cardstock, 12” is also the maximum height. For material with a backing, such as sticker paper, maximum height is 120”




Step 3: Change orientation

- If desired, use the “Orientation” options to switch from portrait to landscape or back again.

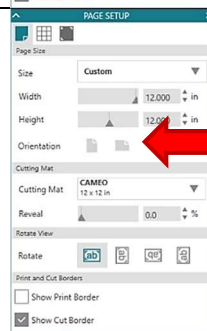

Step 4: Show the cut mat grid lines

- Slide the “Reveal” slider to your desired amount of visibility of the 1” grid lines on the cut mat.

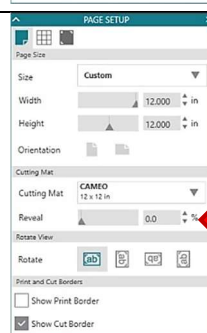

Step 5: Or, use other grid options.

- Click on the “Grid Settings” tab at the top of the “Page Setup” panel.
- The “Show Grid” box makes the grid visible. The “Spacing” and “Divisions” sliders change the appearance of the grid.

