 


Using the Sublimation Printer

 
Step 1: Create the file to print

- Files can be in any software or format that can be sent to a printer.
- The example is in Microsoft Word.

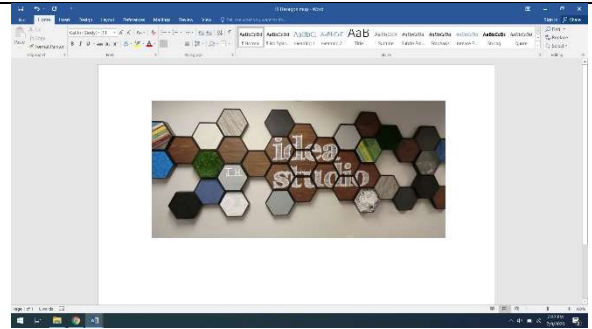


Step 2: Print the file

- Send the file to print.
- As the printer, select "Sawgrass Print Manager".

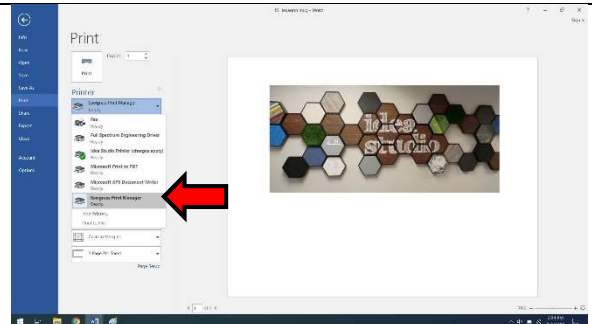


Step 3: Open the print file

 - On the desktop, click on the "Sawgrass Smart Folder" icon.
- When the folder opens, double on the file name to open it in Sawgrass Print Manager.

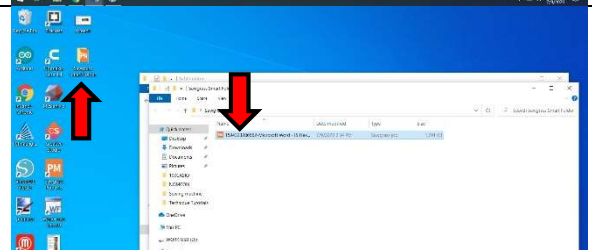


Step 4: Select the substrate

 - Click on the drop-down menu under "Substrate".
- Select the item that most closely matches the material you will be sublimating onto.

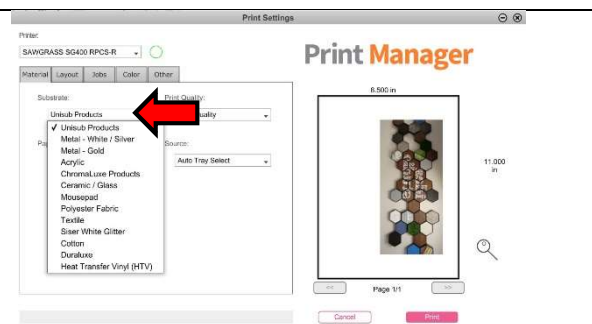


Step 5: Select the paper

 - Click on the drop-down menu under "Paper".
- Select TexPrint-R

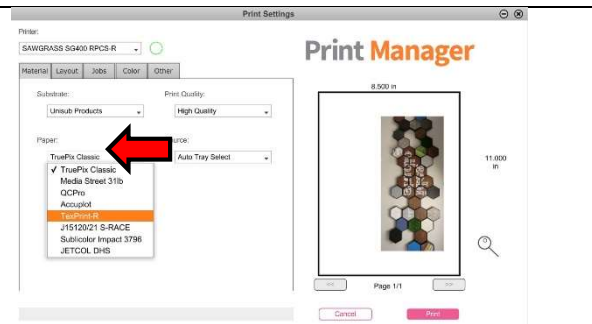

Step 6: Choose whether to mirror

 - Below the “Paper” drop-down is a check-box that says “Mirror.”
- If printing on TexPrint-R paper, make sure the box is checked.
- If printing on Siser EasySubli Vinyl, the box should not be checked.

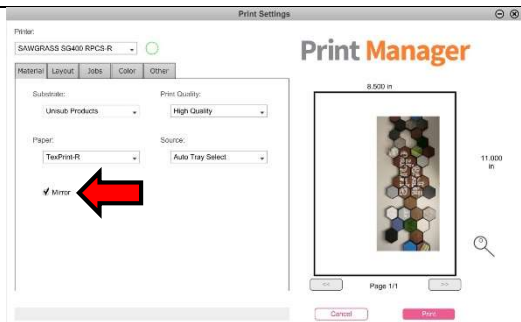

Step 7: Connect the laptop to the printer

- Turn on the printer by holding the power button for about one second.
- Plug the USB cord into the laptop.



 
Step 8: Load the paper

- Take only the number of sheets you need, and leave the remainder in their packaging.
- Open the paper tray.
- Insert TexPrint-R paper with the logo-side facing up.
- Insert Siser EasySubli Vinyl sheets with the shiny side facing up.
- Close the paper tray.



Step 9: Print

- Click the “Print” button in Sawgrass Print Manger.
- Colors will look slightly off when the page comes out of the printer. The colors develop properly when exposed to the heat and pressure of the heat press.

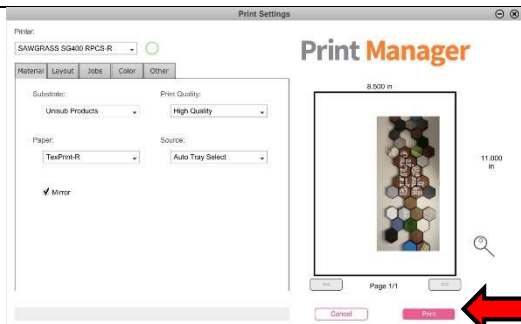

Step 10: Turn off the printer

- When the print job is finished, turn off the printer by holding the power button for about 3 seconds, and unplug the USB cord from the laptop.

